

Model	3201-30
Voltage	Non-electric
Water Supply Mode	Connect to the cold water supply pipe directly
Angle of Nozzle	Adjustable
Water Temperature for self-cleaning	Cold
Self-cleaning	YES
Water Temperature	3° ~ 35°
Room Temperature	3°~ 40°
Water Pressure	0.05 MPa ~0.6 MPa
Distance between Holes Axis	116 ~ 215 mm
Item Size	382.5x188x71.5mm

Trouble shooting

Issues	Measures
The spray nozzle has no water	<ol style="list-style-type: none"> 1. The water supply is cut off. 2. The angle valve is closed. 3. The spray nozzle is clogged. 4. Low water pressure. 5. Water supply pipe is bended.
Low water pressure	<ol style="list-style-type: none"> 1. The water flow control knob is adjusted to be low position. 2. Water supply pipe is bended.


Note

Please do not use the body to press or trample the bidet.



When you use the bidet, do not flush the toilet at the same time.

Assembly Instruction




3201-30 bidet with cold

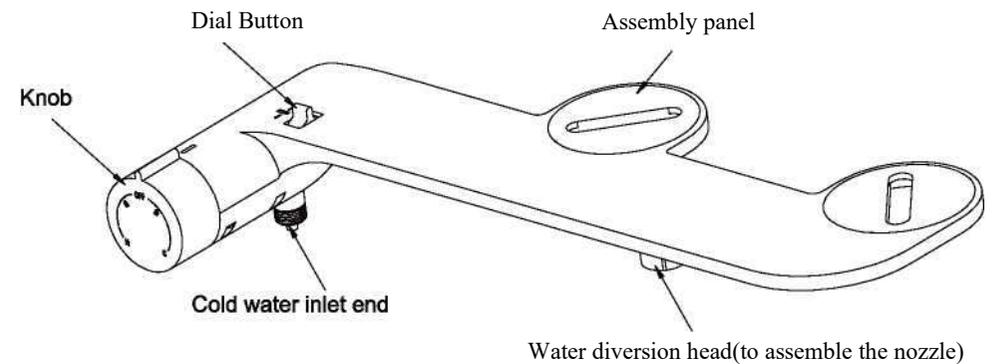


1

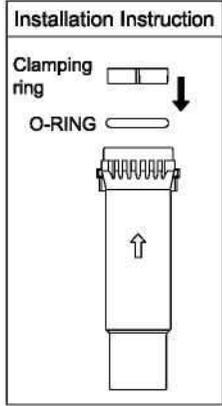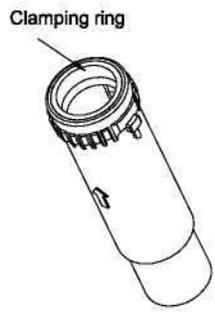


2

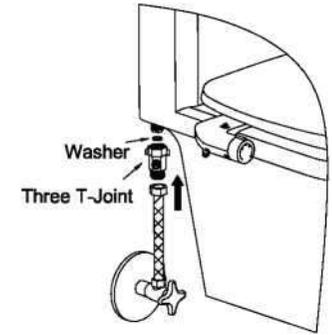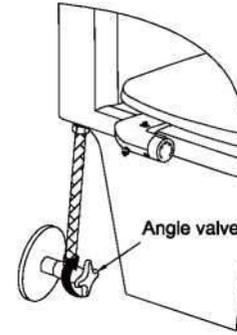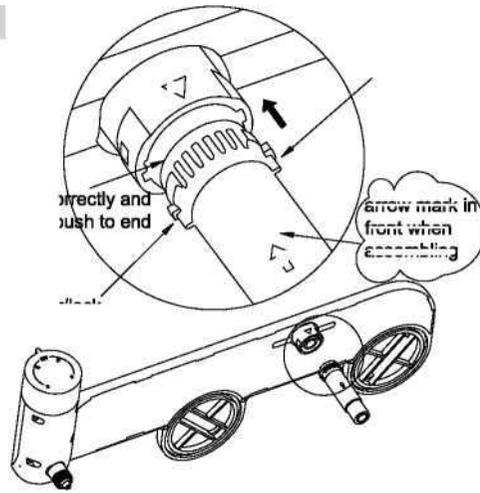

3

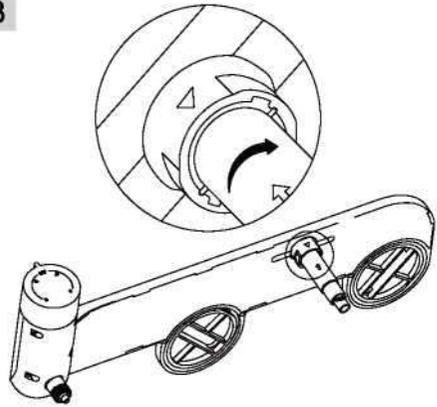


4

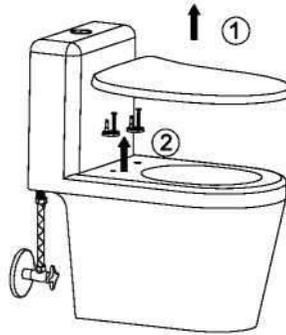

Classification	Assembly parts	Relative assembly diagram
A	Braided hose	A
B	PU hose	B


Choose the right assembly parts according to the relative assembly diagram.

A



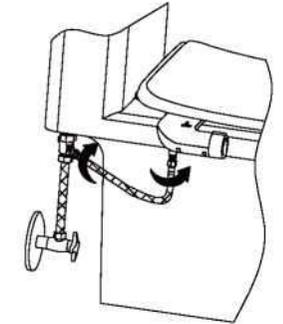


To assemble the braided hose to the water inlet end of bidet and turn tight.

6

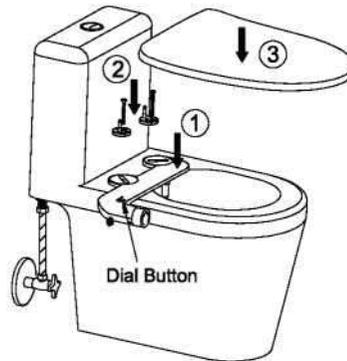

B

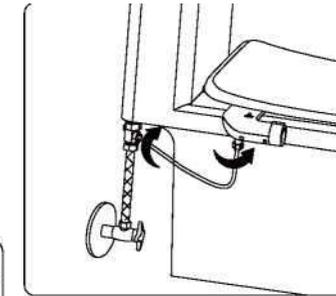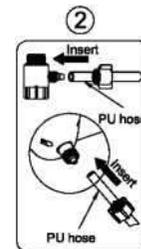 

- Put the plastic nut and fixing nut through the hose.
- Inset three T-Joint and bidet inlet end separately into two ends of hose.
- screw tight the nut

10



Adjust the knob according to the picture showing, turn on the angle valve, and then check if any leaking happening in each connector.

